




## Torque Tester – Analogue




### Model No. PTT-0103

**Torque Tester Analogue** is a consistent tool to measure the force or torque required to open a closed cap of PET bottle/Jars. It gives Torque in analogue format. The analogue display is a high end sophisticated read out with pointer adjusting knob. The test sample is placed in between the anti-slip holders/pegs for strong holding of test sample.


- Strong clamping pegs/holders for zero slip gripping support
- In-house calibration facility
- Compact and light-weight, easy to move.
- Adjustable clamping mechanism to hold different size of bottles
- Highly accurate torque scale

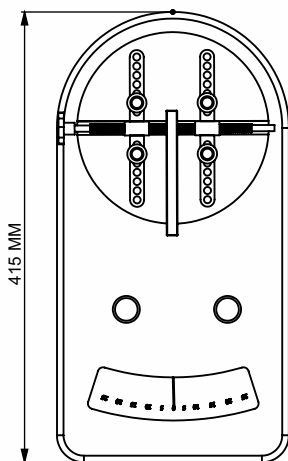


Top View

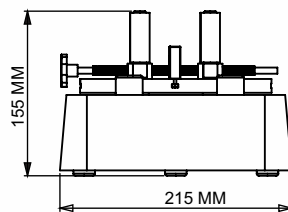

Front View

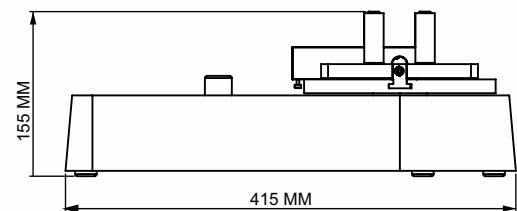

Side View

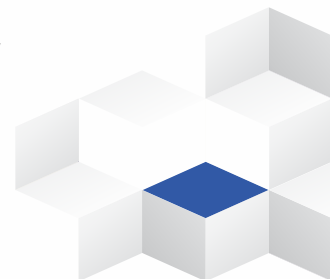



# Presto Stantest Pvt. Ltd.

I-42, DLF Industrial Area Phase-1, Delhi Mathura Road, Faridabad 121003, Haryana, India  
P : 9210 903 903, +91 129 4272727, 93111 24302 E : info@prestogroup.com

- Faridabad • Sonipat • Kolkata • Mumbai • Pune • Ahmedabad
- Chennai • Bangalore • Hyderabad

[www.prestogroup.com](http://www.prestogroup.com)



The instrument is used for testing the opening force of the PET bottles when subjected to a load under twisting. The equipment is handy and can be carried on the shop floor as well as be placed inside the laboratory. The unique self-adjusting holding fixture can easily accommodate any shape and size of bottle with zero slip guaranteed.

## Key Specifications:

Max.TorqueRange	20 lb-inch
Accuracy	± 1 lb- inch (with master weight)
Least Count/Resolution	1 lb-inch
Minimum Diameter for specimen holding	30 mm
Maximum Diameter for specimen holding	110 mm
Max.size of test bottles to be tested	2.5 litres
Weights for Calibration	10 lbs, 20 lbs (Optional Part)

## Highlights:

Standard weights (for calibration)	2 (Optional)
Material	Mild Steel
Clamping	Manual
Finish	Powder coated Black combination finish and bright chrome / zinc plating for corrosion resistant finish
Dimensions	215x415x155 mm
Pag Pin	Changable Position

## Optional :

- Calibration Kit with master weight optional part.
- Torque Tester Motorised with inbuilt calibration kit also available on request.
- Digital Torque Tester models available in various range on request.

Thank you customers for choosing us as your partners in growth !



\*All the above logos are the sole property of their respective owners and are used purely for depiction purposes only.

## OUR OTHER PRODUCTS :-

Top Load Tester	Wall Thickness Gauge	Gloss Meter Triangle	Eccentricity Tester	Moisture Analyzer MB 45	Preform Neck Cutter

